


WINBEX[®] NAPA 5012 MS




Multi-Function Stool Instructions

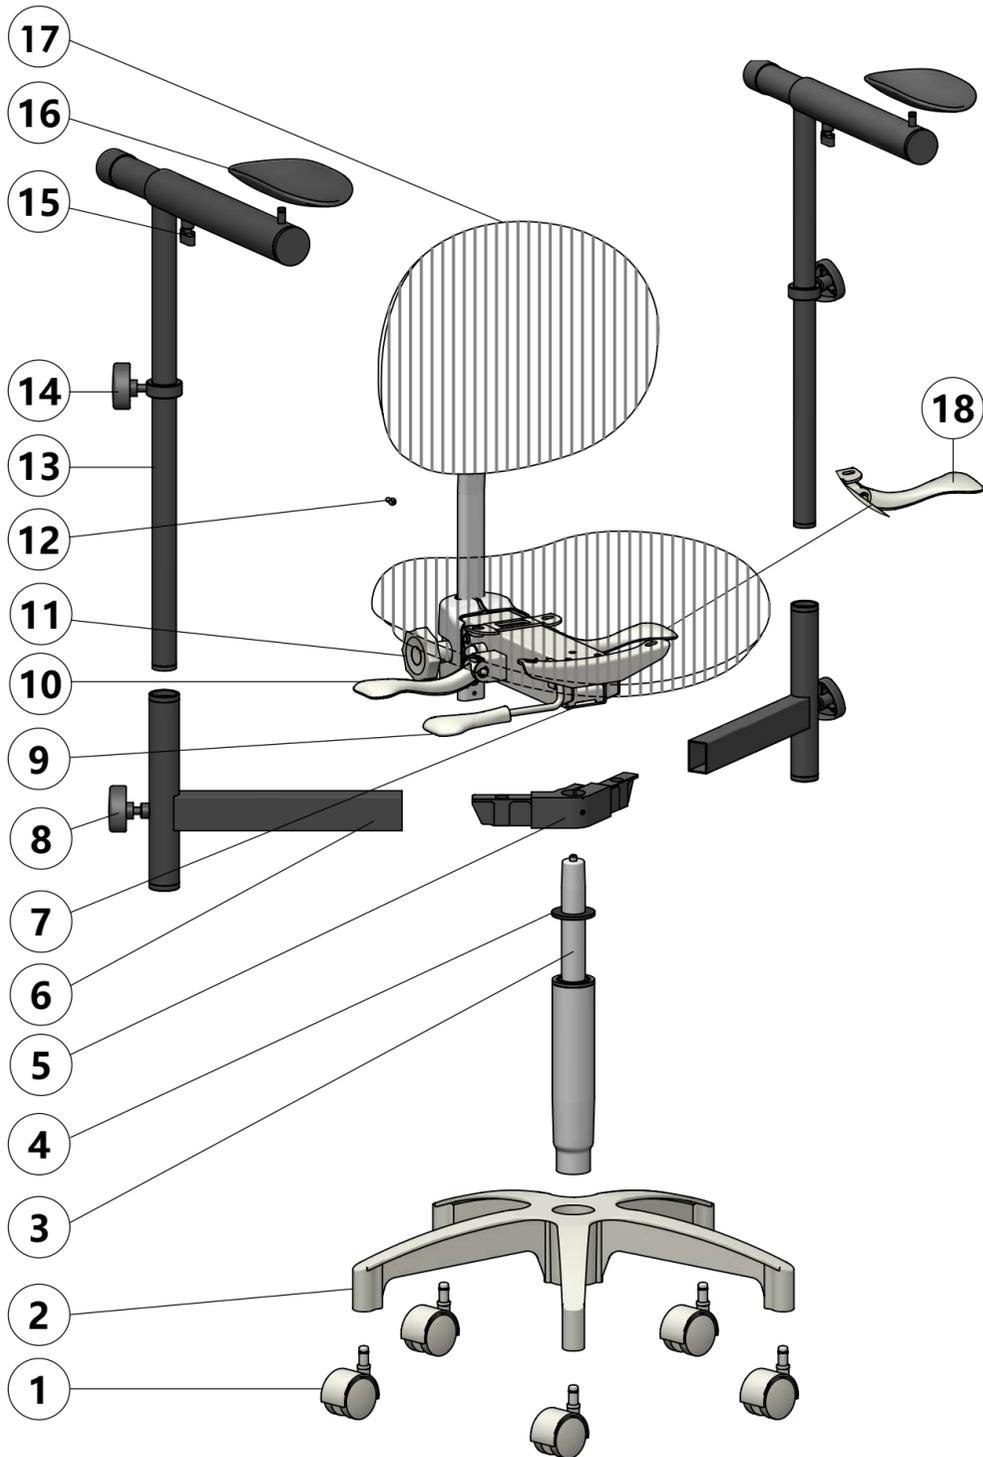

This stool requires a limited amount of assembly.
Please read the instructions enclosed:

Assembly Instructions

1. Attach wheels (1) onto base (2)
2. Insert gas cylinder (3) into base (2)
3. Place rubber ring (4) onto gas cylinder (3)
4. Place "Part" (5) onto gas cylinder (3) with about 65m/m(2.5") distance from top end of cylinder and tighten bolts (▲see index A) to secure "Part" and cylinder stay firmly
5. Put arm support bracket(L+R)(6) onto "Part" (5) and turn the bolts(▲see index B) anti clockwise(back out directions) to secure the arm support bracket stay firmly with "Part"
6. Snap arm pads(16) into tubular arms(L+R)(13)
7. Insert tubular arm(13) into arm support bracket(6)
8. Use handwheels knob(8) to adjust the desired height
9. Attach seat(7) onto gas cylinder(3) and make sure the seat right on the center position between the two(L+R) tubular arms
10. Insert the stop screws(12) onto the oval tube upright **after** the back(17) is inserted into the seat mechanism
11. More detailed assembly instruction with illustration state on users manual
12. Stool function adjustment please see on the reverse

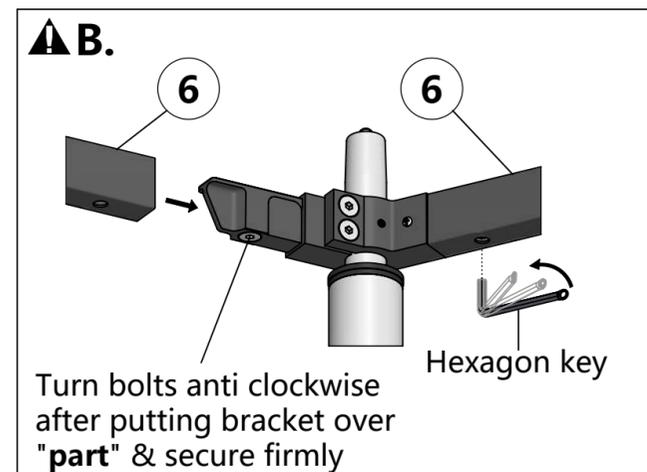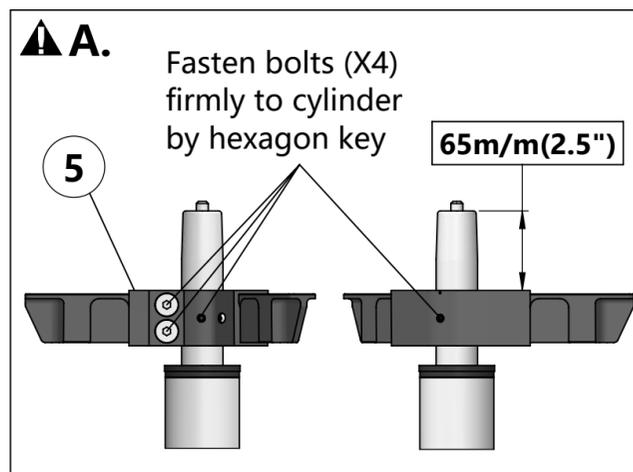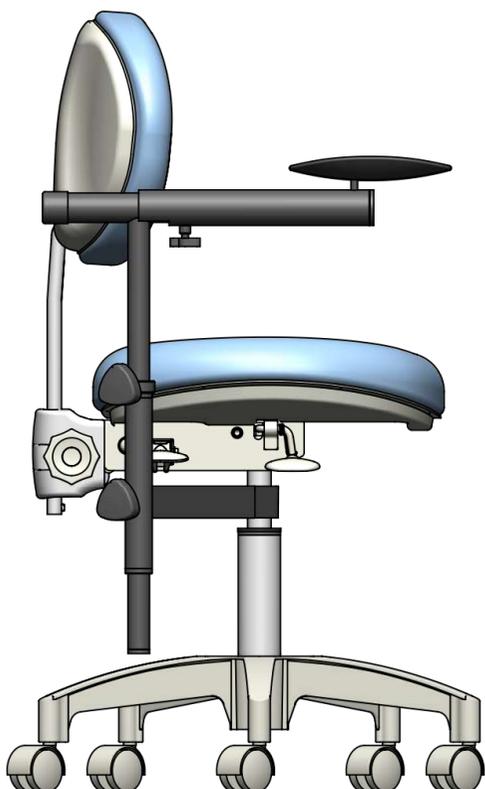

WINBEX CORPORATION

95, Nangang 3rd Rd., Nangang Industrial Park,
Nantou City 54067, Taiwan
T/ +886-49-2260938 F/ +886-49-2260431
E/ winbex@winbex.com.tw W/ winbex.com

WINBEX[®] NAPA 5012 MS Multi-Function Stool Instructions



Stool Function Adjustments

Seat Height

The height of the seat may be adjusted by pulling height adjustment lever ⑨ upwards and by applying/removing pressure on the seat until the required height is attained.

Seat Tilt

Seat with 5 degrees of forward tilt and 6 degrees rearward by pushing handle lever ⑩ downwards to "free float" the tilt and pull upwards to re-lock until the ideal working positions is attained.

Back Movement

Back with 10 degrees forward movement and 14 degrees rearward by pushing handle lever ⑱ downwards to "free float" the movement and pulling upwards to re-lock when the required position is attained.

Back Height

The height of the back may be adjusted by loosening adjustment knob ⑪ and sliding the upright tube up/down and held in place by hand tightening adjustment knob ⑫.



WINBEX CORPORATION

95, Nangang 3rd Rd., Nangang Industrial Park,
Nantou City 54067, Taiwan

T/ +886-49-2260938 F/ +886-49-2260431
E/ winbex@winbex.com.tw W/ winbex.com